HANDS FREE SOAP DISPENSER INSTRUCTIONS

How to Setup Lock

 
To make a locking dispenser, remember to insert the lock into the hole at the bottom of the dispenser BEFORE securing to the wall.

How to Open Dispenser

To open the dispenser, insert key into key holes located at the bottom of the dispenser. Pull dispenser cover towards you from the top.



Rear View



Installation Instruction

Dispenser must be mounted at least 8 inches above any surface.

- Hold the dispenser against the wall in the desired location, open cover and mark screw hole locations on the wall.
- Install the provided anchors into drywall and secure the dispenser with the provided screws.

Installing Batteries

- 1. Open the dispenser and remove the cartridge to locate the control box.
- 2. Squeeze the red tabs on both sides of the control box lid and pull to remove.
- 3. Place six (6) AA-cell Alkaline batteries in the proper orientation and close the cover back into place.

Installing the Cartridge

- 1. Place the cartridge on top of the control box with the pump facing front and downwards.
- 2. Pull the pump downward and clamp into the groove of the control box. Make sure the nozzle of the pump is fixed into the groove of the push rod. Ensure the clips on the valve are fully seated into the control box, indicated by an audible click.
- 3. Close the dispenser cover. The LED indicator will blink GREEN one time and the dispenser will be ready to use.
- 4. Place hand underneath the dispenser, within 5cm of the sensor. The LED will blink GREEN and dispense soap onto your hand.

Sensitivity Automatic Adjustment and Warning

If the mounting distance is too close to the basin or other obstacles, the LED will blink GREEN and RED by turns to remind the user to remove the obstacles ahead of the sensor or mount the dispenser higher.

Dosage Option/Reset Counter (Located on right side of control box)

- 1. Press \circ to turn the dispenser ON/OFF.
- 2. Press O to choose the dosage.
 - one dose every time
 - wo doses every time
 - three doses every time

The RED LED will blink frequently when the voltage is low.

User should press \circlearrowleft to OFF, then replace the batteries. Press \circlearrowleft again to turn back ON. After this, the LED will become normal.

Changing Pumps

Pumps can be easily changed. Start by pulling pump straight out from bottom of bottle, then insert nipple of new pump into the bottle.


Pump Options


- Foam Soap Pump
- 2 Lotion Soap Pump
- 3 Spray Pump







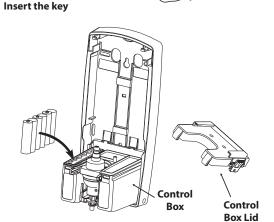


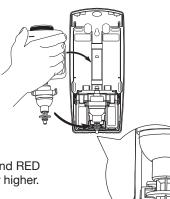

1:1 Installation drawing

A) Tape Mount Option

- Peel film from mounting tape on back of dispenser and adhere to clean, dry, smooth surface.
- 2. Allow to cure for 24 hours prior to installing dispenser.

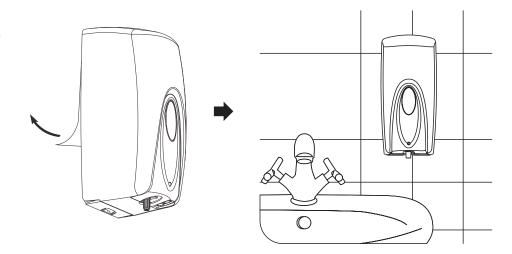

B) Screw Mount Option

Use appropriate anchors/fasteners for wall substrate.

