

VISIT THE LIFETIME WEB SITE: WWW.LIFETIME.COM


** Do Not Contact the Store **

For Assistance, including missing or broken parts, Call Customer Service at:

1 (800) 225-3865

2-30" Wall Panels with Windows for 8' Sheds Accessory Kit #0121

ASSEMBLY
INSTRUCTIONS AND
OWNER'S MANUAL

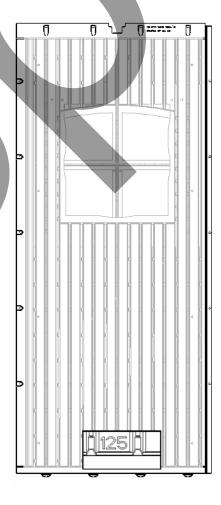

Save this instruction in the event that the manufacturer has to be contacted for replacement parts.

A MINIMUM OF TWO ADULTS ARE REQUIRED FOR ASSEMBLY



BEFORE BEGINNING ASSEMBLY




Identify and inventory all parts using the checklist boxes on the Parts List. Keep the hardware bags and their contents separate. If any parts are missing, call our Customer Service Department.

Parts List

ID	Part #	Description	Qty	
WA	ZS12582	Window Wall Panel	2	
WB	ZS01200	Window	2	
Hardware Bag [1013714]				
TA	1007360	Window Latch	4	
TB	BS07500	.25" x .625" Screw	35	
TC	BS06100	#10 x 3/8" Pan Head Screw	2	

HARDWARE IS ACTUAL SIZE

(unless otherwise indicated)

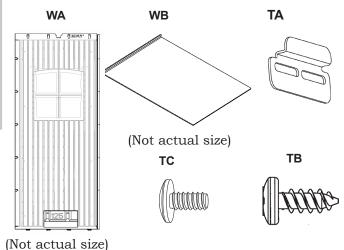

Tools and Materials Required for Assembly
(Not Included)

1. #2 Phillips screwdriver or Electric drill with phillips head

\triangle

SAFETY INSTRUCTIONS



FAILURE TO FOLLOW THESE WARNINGS MAY RESULT IN SERIOUS INJURY OR PROPERTY DAMAGE AND WILL VOID WARRANTY.

To ensure safety, do not attempt to assemble this shed without following the instructions carefully. Check entire box and inside all packing material for parts and/or additional instruction material. <u>Before beginning assembly, read the instructions and identify parts using the hardware identifier and parts list in this document.</u> Proper and complete assembly, use and supervision are essential for proper orientation and to reduce the risk of accident or injury.


- Do not use or store hot objects such as grills, blowtorches, welding equipment, etc. in the shed.
- If using a ladder during assembly, use extreme caution.
- Two capable adults are required for shed assembly. (It is also recommended that a third adult function as an instruction reader.)

Most injuries are caused by misuse and/or not following instructions. Use caution when using this shed.


Note: Follow the step below to assemble both window wall panels in this kit, and then determine which option applies to your situation and follow the directions under that option.




Remove plastic sheeting from **Window** (**WB**) and slide Window into slot on the **Window Wall Panel** (**WA**). Attach a **Window Latch** (**TA**) above each corner of the Window as shown. When tightening **Screws** (**TB**), be sure that Window Latches will slide freely. Do not overtighten. Insert **Screw** (**TC**) into the hole in the window. Set panel aside.

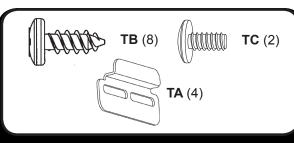



Hardware Bags: Sacs d'accessoires : 1013714 Screwdriver Tournevis

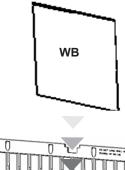


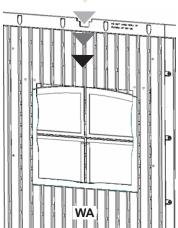



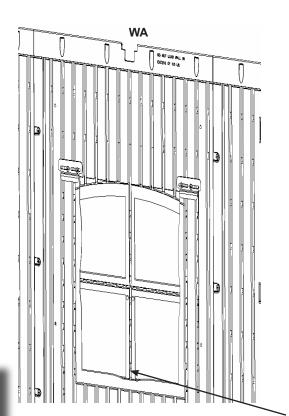

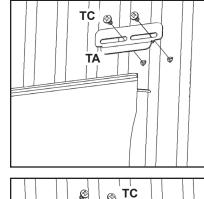

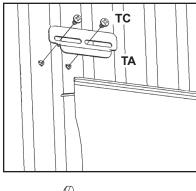

Place Screw (TC) in this hole to keep window from sliding up too far. Insert until flush with the window.

2 Select an Option

Option 1: Add Window Wall Panels to a New Shed

Option 2: Add Window Wall Panels to an Existing Shed


Option 1: Add Window Wall Panel to a New Shed

Opt. 1.1: To add the Window Wall Panels to a new 8' shed, simply insert the window wall panels in place of two of the regular wall panels. Refer to the assembly instructions in the Owners Manual for assistance.


Option 2: Add Window Wall Panels to an Existing Shed **Save all hardware for re-assembly!**

Note: Keeping hardware separated according to where it came from will make reassembly easier.


Opt. 2.1: Remove last three **Skylights**. Save and set aside with hardware.

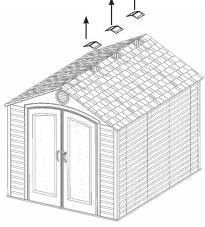


Opt. 2.2: Remove the last three **Roof Caps**. Save and set aside with hardware.

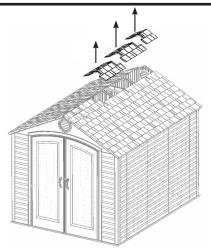


Opt. 2.3: Remove the back **Roof Panels** and **Roof Support Bars**. Save and set aside with hardware.

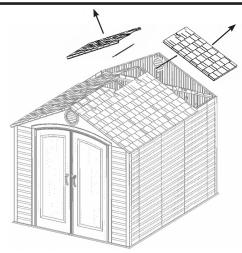

Opt. 2.4: Remove the next **Roof panels** and **Roof support bars**. Save and set aside with hardware.

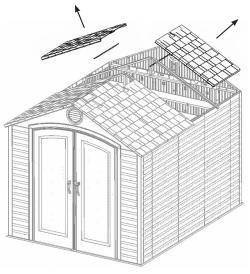



Opt. 2.5: Remove the Roof Truss. Save and set aside with hardware.

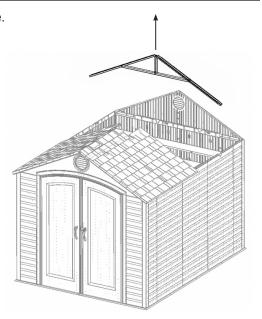

Note: You may need to remove additional roof and truss parts to expose the unwanted Wall Panels (see steps 2.1 - 2.5).

Opt. 2.6: Remove unwanted Wall Panels.

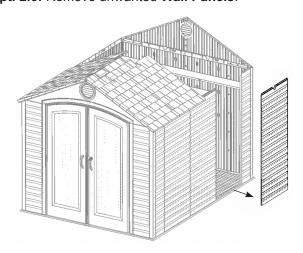

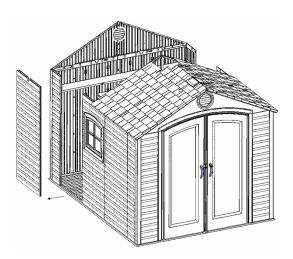


Opt. 2.7: Insert the new Window Wall Panels (WA) in place of the wall panel you removed and attach with .25" x .625" Screws (TB). If you have not yet attached the window to the wall panel, refer to the section Assemble Window on page 3 for instructions.





Note: You may have more roof and truss parts to replace, than what is shown below (dependant on what steps 2.1 - 2.5).

Opt. 2.8: Replace the Roof Truss.

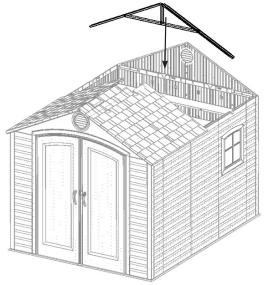


Opt. 2.9: Replace the Roof Panels and Roof Support Bars.

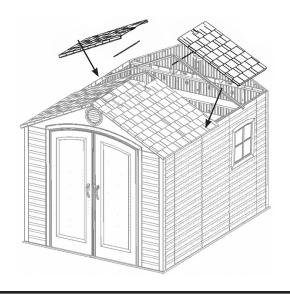

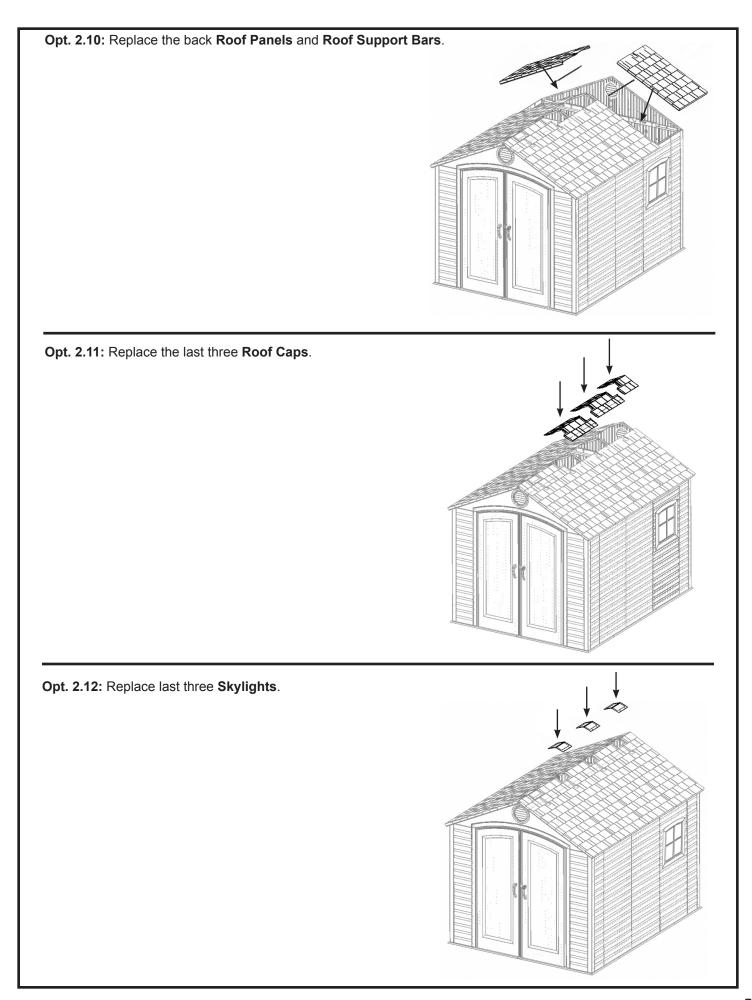

Enhance your Lifetime® Outdoor Shed by purchasing the following Shed Accessories:

Model #	
0110	Corner Shelf (2 pack)
	Two 10" radius shelves with hardware.
0130	32" Shelf Kit w/ hardware (3 pack)
	Three 32" x 10" Steel-Reinforced Shelves with shelf brackets and
	hardware.
0150	8' Shelf Kit w/ hardware
	One 96" x 9" Steel-Reinforced Shelf with shelf bracket and hardware.
0170	Pegboard w/ hardware
	One 22.5" x 22.5" Pegboard Panel with hooks. Great for hanging large
	and small items such as: rakes, shovels, and hand tools.
0190	Shelf Support Channel
	Two Shelf Support Channels that allow the 32" shelves on either of the
	side walls of your shed.

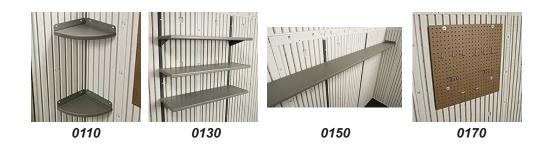

To purchase shed accessories, visit us at:

www.buylifetime.com

Or call: 1 (800) 424-3865

Congratulations on your Lifetime® Outdoor Shed purchase. By following the instructions below, your new Lifetime shed should provide you with years of service and enjoyment.

Cleaning and Care

The polyethylene walls and shelves are stain- and solvent resistant. To clean, use a mild soap and a soft-bristled brush. Abrasive cleaning materials may scratch the plastic and are not recommended. Repair scratches or rust spots on the metal by Sanding the affected area lightly; using a rust preventative spray primer; and finally, spraying with a high-gloss spray enamel paint. Avoid placing a direct heat source on or near surfaces unless using a heat

For warranty details or to register your product, visit www.lifetime.com or call 801-776-1532




** Do Not Contact the Store ** For Assistance, including missing or broken parts, Call Customer Service at:

1 (800) 225-3865

2-30" Wall Panels with Windows for 8' Sheds Accessory Kit #0121

Manual de l'Utilisateur avec Instructions de Montage

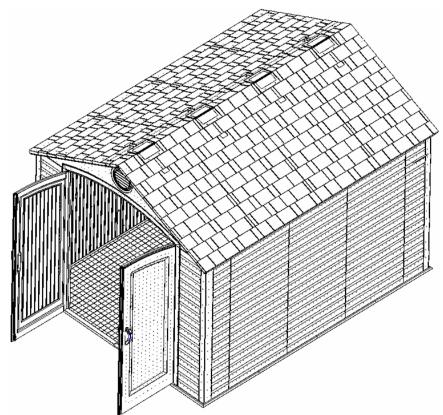

Save this instruction in the event that the manufacturer has to be contacted for replacement parts.

DEUX ADULTES REQUIS POUR LE MONTAGE



Avant de commencer le montage




Identify and inventory all parts using the checklist boxes on the Parts List. Keep the hardware bags and their contents separate. If any parts are missing, call our Customer Service Department.

Liste des pièces

ID	No. pièce	Description	Qty	
WA	ZS12582	Panneau mural de fenêtre	2	
WB	ZS01200	Fenêtre	2	
Sac d'accessoires [1013714]				
TA	1007360	Loquet de fenêtre	4	
TB	BS07500	.25" x .625" Vis	35	
TC	BS06100 #10 x	3/8" Vis à tête cylindrique bombée	2	

HARDWARE IS ACTUAL SIZE

(unless otherwise indicated)

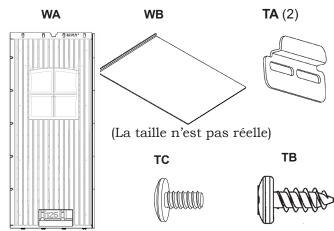

Outils et matériaux conseillés (Non inclus)

 #2 Vis Phillips or Electric drill with phillips head

(La taille n'est pas réelle)



SAFETY INSTRUCTIONS



FAILURE TO FOLLOW THESE WARNINGS MAY RESULT IN SERIOUS INJURY OR PROPERTY DAMAGE AND WILL VOID WARRANTY.

To ensure safety, do not attempt to assemble this shed without following the instructions carefully. Check entire box and inside all packing material for parts and/or additional instruction material. <u>Before beginning assembly, read the instructions and identify parts using the hardware identifier and parts list in this document.</u> Proper and complete assembly, use and supervision are essential for proper orientation and to reduce the risk of accident or injury.


- Do not use or store hot objects such as grills, blowtorches, welding equipment, etc. in the shed.
- If using a ladder during assembly, use extreme caution.
- Two capable adults are required for shed assembly. (It is also recommended that a third adult function as an instruction reader.)


Most injuries are caused by misuse and/or not following instructions. Use caution when using this shed.


Note: Follow the step below to assemble both window wall panels in this kit, and then determine which option applies to your situation and follow the directions under that option.


1 Assemble Window (Repeat step for both windows)


Enlever la protection en plastique de la fenêtre (WB) and slide Window into slot on the Window Wall Panel (WA). Fixez un loquet de fenêtre (TA)au-dessus de chaque angle de fenêtre, comme illustré. Lorsque vous serrez les vis (TB), assurez-vous que les loquets glissent librement. Ne serrez pas excessivement. Introduisez la vis (TC) dans l'orifice de la fenêtre. Posez le panneau de côté.

 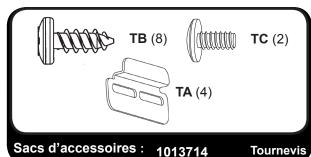


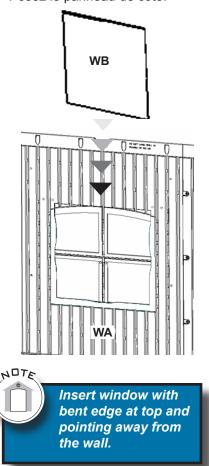

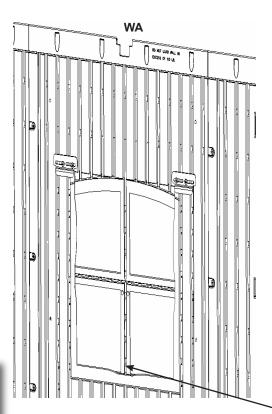

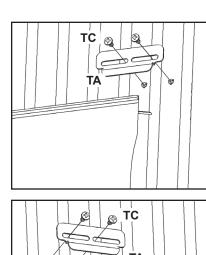

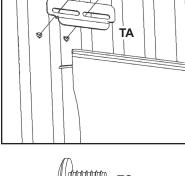



Select an Option

Option 1: Add Window Wall Panels During New Shed Installation

Option 2: Add Window Wall Panels During to an Existing Shed


Option 1: Add Window Wall Panel to New Shed

Opt. 1.1: To add the Window Wall Panels to a new 8' shed, simply insert the window wall panels in place of two of the regular wall panels. Refer to the assembly instructions in the Owners Manual for assistance.


Option 2: Add Window Wall Panels to an Existing Shed **Save all hardware for re-assembly!**

Note: Keeping hardware separated according to where it came from will make reassembly easier.


Opt. 2.1: Enlevez les trois dernières Fenêtres de toit. Save and set aside with hardware.

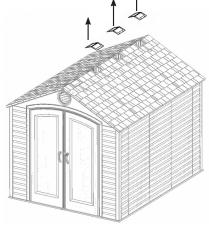


Opt. 2.2: Remove the last three **Roof Caps**. Save and set aside with hardware.

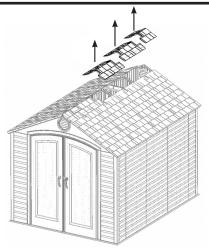


Opt. 2.3: Remove the back **Roof Panels** and **Roof Support Bars**. Save and set aside with hardware.

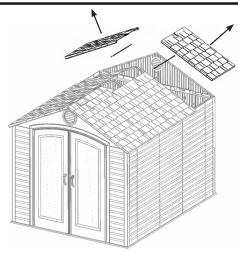

Opt. 2.4: Remove the next **Roof panels** and **Roof support bars**. Save and set aside with hardware.

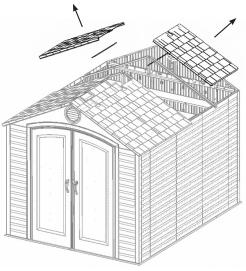



Opt. 2.5: Remove the Roof Truss. Save and set aside with hardware.

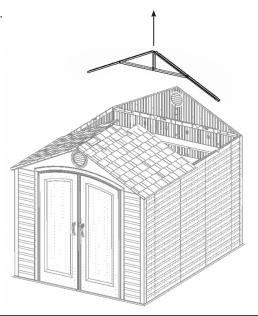

Note: You may need to remove additional roof and truss parts to expose the unwanted Wall Panels (see steps 2.1 - 2.5).

Opt. 2.6: Remove unwanted Wall Panels.

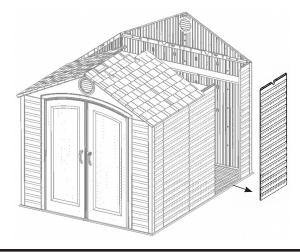

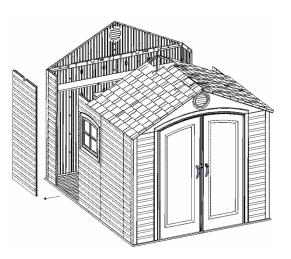


Opt. 2.7: Insert the new Window Wall Panels (WA) in place of the wall panel you removed and attach with .25" x .625" Screws (TB). If you have not yet attached the window to the wall panel, refer to the section Assemble Window on page 3 for instructions.





Note: You may have more roof and truss parts to replace, than what is shown below (dependant on what steps 2.1 - 2.5).

Opt. 2.8: Replace the Roof Truss.

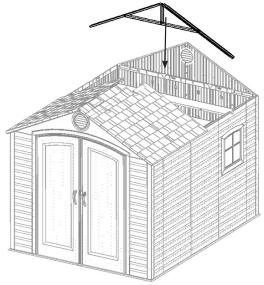


Opt. 2.9: Replace the Roof Panels and Roof Support Bars.

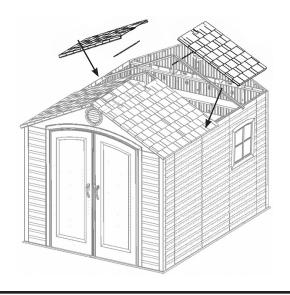

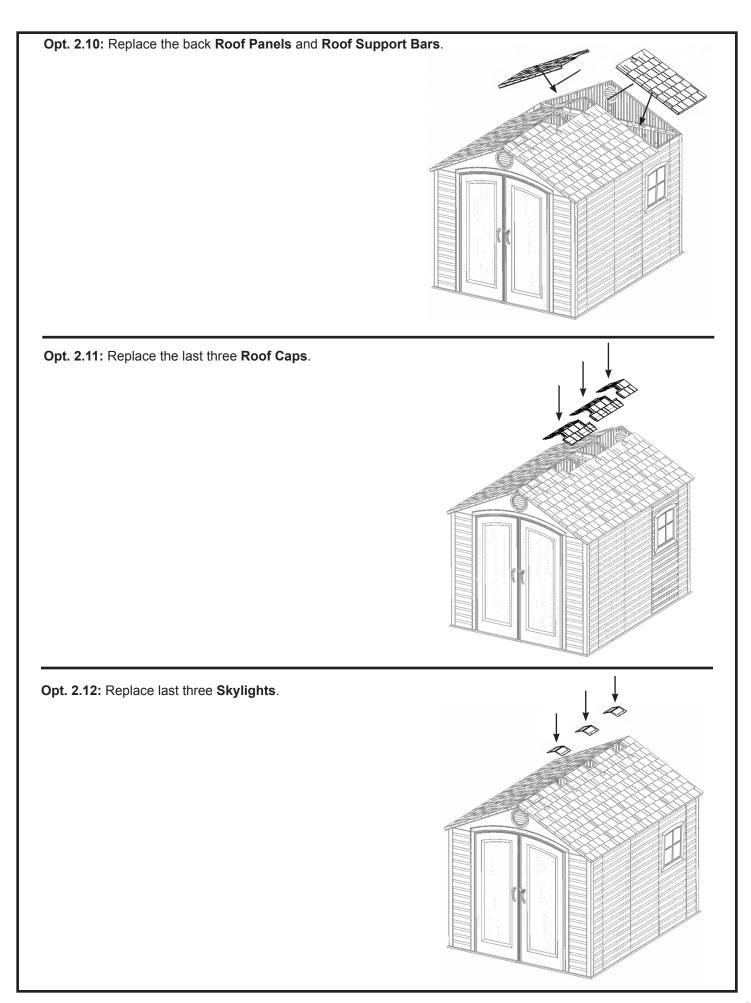

Améliorez votre hangar Lifetime® Outdoor Shed par l'achat des kits ou des pièces de rechange suivants. Appelez notre Service à la Clientèle au numéro:

Model #	
0110	Étagère d'angle (pack de 2)
	Deux étagères d'angle de 10" avec accessoires
0130	Kit d'étagère de 32" avec accessoires (pack de 3)
	Tres estantes de 32" x 10" reforzados por acero con soportes y
	accesorios.
0150	Kit 'étagère de 8' avec accessoires
	Un estante de 96" x 9" reforzado por acero con soporte y accesorios.
0170	Panneau perforé avec accessoires
	Un panneau perforé de 22.5" x 22.5" avec crochets. Pour accrocher les
	articles grands et petits tels commes : les râteaux, les pelles, et les outils
	à main.
0190	Voie de support d'étagère
	Deux voies de support d'étagère qui soutiennent les étagères de 32" sur

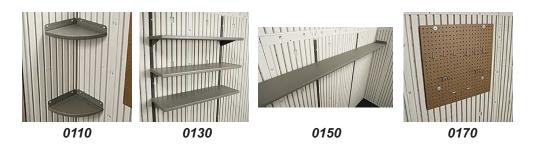

les deux murs latéreaux de votre abri.

To purchase shed accessories, visit us at:

www.buylifetime.com

Or call: 1 (800) 424-3865

** Les clients situés à l'extérieur des États-Unis ou du Canada peuvent s'adresser au magasin pour assistance. **

Congratulations on your Lifetime® Outdoor Shed purchase. By following the instructions below, your new Lifetime shed should provide you with years of service and enjoyment.

Cleaning and Care

The polyethylene walls and shelves are stain- and solvent resistant. To clean, use a mild soap and a soft-bristled brush. Abrasive cleaning materials may scratch the plastic and are not recommended. Repair scratches or rust spots on the metal by Sanding the affected area lightly; using a rust preventative spray primer; and finally, spraying with a high-gloss spray enamel paint. Avoid placing a direct heat source on or near surfaces unless using a heat

For warranty details or to register your product, visit www.lifetime.com or call 801-776-1532

