



STOP!

# BEFORE BEGINNING ASSEMBLY


STOP!

Identify and inventory all parts using the checklist boxes on the Parts List. Keep the hardware bags and their contents separate. If any parts are missing, call our Customer Service Department.


## PARTS LIST

AA	1009266	16" Pegboard Strip	2
<b>Pegboard Hardware Bag [1011398]</b>			<b>1</b>
PA	BS05800	#10 x 3/4" Pan Head Screw	11
<b>Tool Clip Assortment [HH12500]*</b>			<b>1</b>
GA	BA06500	Pegboard J-Hook	3
GB	BA06600	Pegboard L-Hook	3
GC	BA06700	Pegboard Toolholder	2
GD	BA06800	Pegboard 2" Double Arm Hook	1
GE	BA06900	Pegboard 4' Double Arm Hook	1

AA

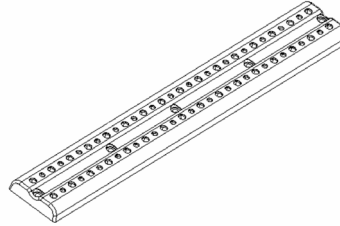


PA




*\* Hang the Tool Hooks on the Pegboard Strips after they are installed.*

## 1 Pegboard Installation

1a Use a Level, and position both 16" Pegboard Strips (AA) in the desired locations. Screw the Pegboards to the wall using #10 x 3/4" screws (PA). **See Note.**



PA (10)

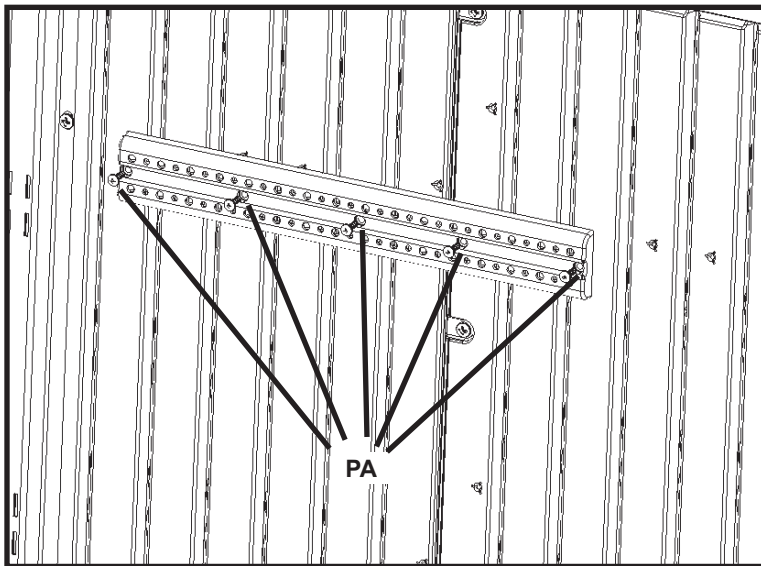

**The Pegboard Strips are screwed directly into the plastic. Line up Strip anywhere on wall so that holes are over plastic (and not over a groove in the wall).**

**Be sure that the Pegboard Strip is level before inserting screws.**

