

FLOOR KIT INSTRUCTIONS FOR 10x8 and 10x16 BUILDINGS

ACTUAL SIZE • 120" WIDE x 96" DEEP (10x8)

• 120" WIDE x 192" DEEP (10x16) **#16630**

1-800-437-0784

Parts Needed:


- A** 2 - 2x4x48" Bond Boards
- B** 2 - 2x4x72" Bond Boards
- C** 9 - 2x4x93" Floor Joist
- D** 2 - 48"x96"x5/8" Floor Panels
- E** 1 - 23-7/8"x96"x5/8" Floor Panels
- 2" and 3" Nails

This instruction may be different from the one specified in Building instruction.

- Use for Premier Series Buildings only, cannot be used for a Marco Series Building or Premier Solar Shed


NOTE: Part letters are not stamped on floor kits.

ASSEMBLY OF 120" x 96" FLOOR FRAME

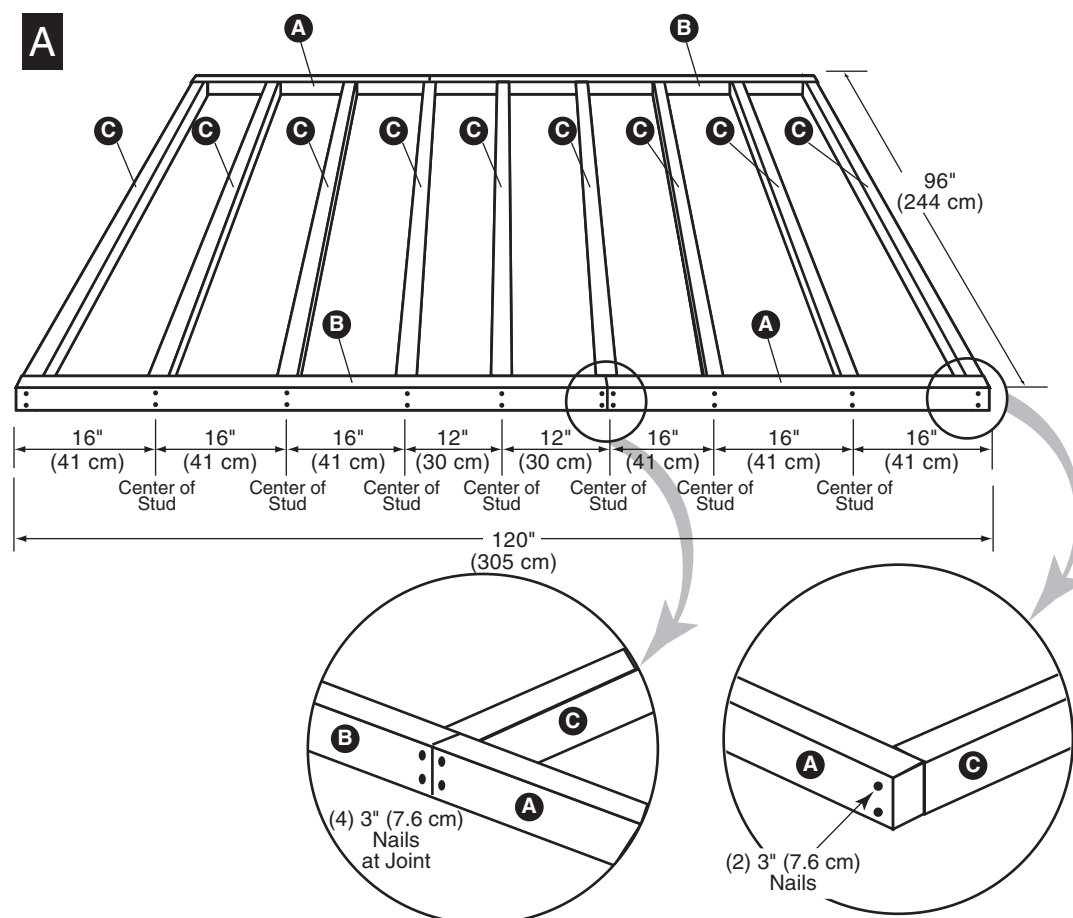

A: Position Bond Boards **A** & **B** and Floor Joists **C** as shown.


Using 3" nails, nail twice through each Bond Board **A** & **B** into each end of each Joist **C**, keeping pieces flush at top and ends, and maintain 16" and 12" spacing in middle as shown. Where **A** & **B** join together use 4-3" nails.

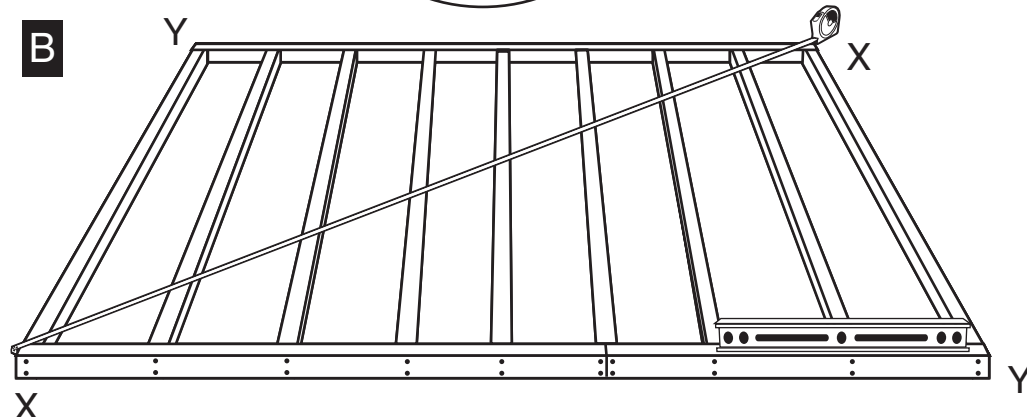


B: Completed Floor Frame should be positioned at building site, leveled, using shims between floor frame and ground before proceeding to Floor Panel Attachment.

Square frame by making corner-to-corner measurements (**X** to **X** and **Y** to **Y**) the same.

10x8 and 10x16 FLOOR KIT INSTRUCTIONS (CONTINUED)

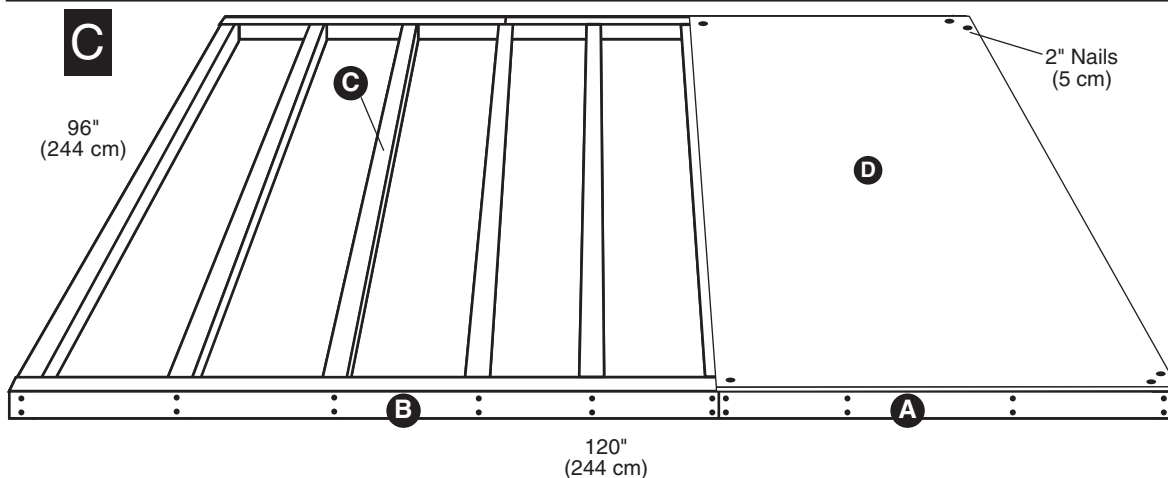

- C:** Position a 48 x 96" Floor Panel **D** flush to the outside edges of sides and back of Floor Frame. Secure panel with two 2" nails at outside corners and one 2" nail at other corners.

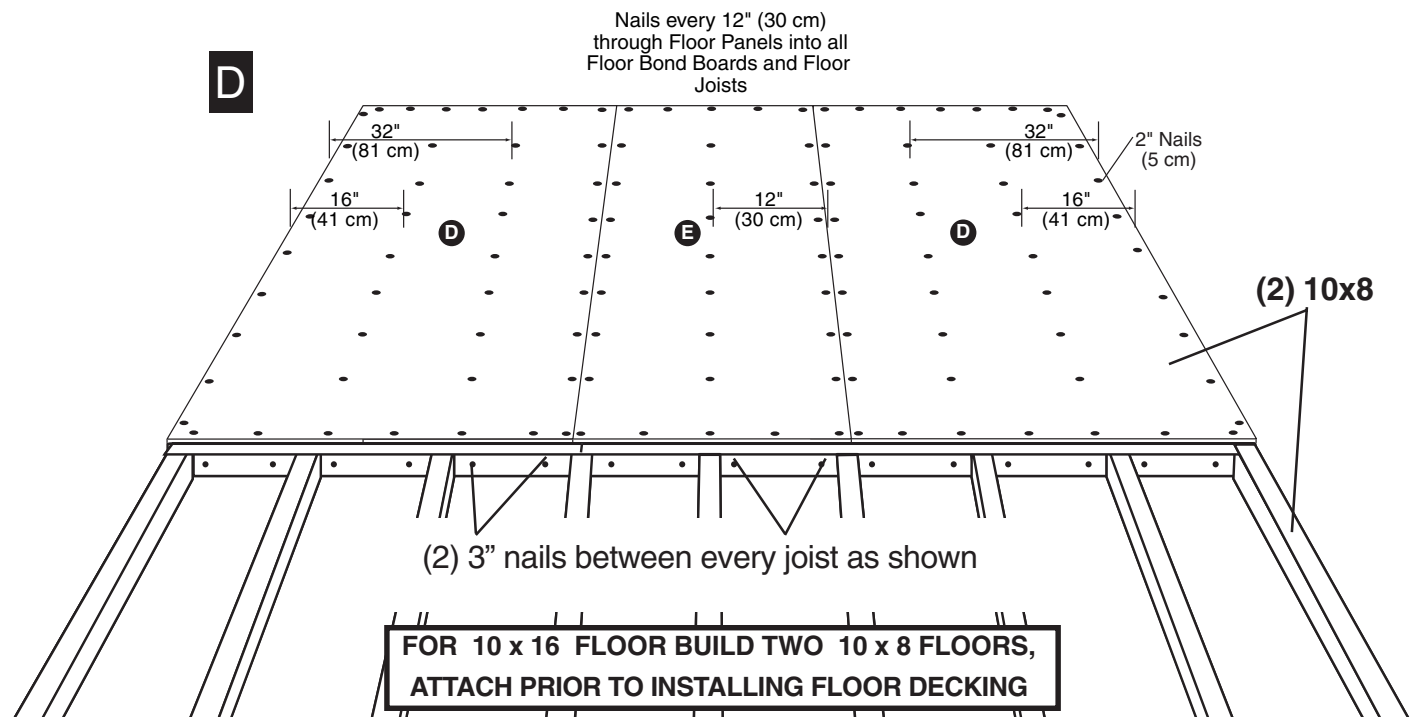

- D:** Position a 23-7/8" x 96" Floor Panel **E** flush against first panel and flush to edges of Floor Frame. Secure panel with one 2" nail at outside corners.
- Position the other 48" x 96" Floor Panel **D** flush against second panel and flush to edges of Floor Frame. Secure panel with two 2" nails at outside corners and one 2" nail at each of other corners.

Note: Mark a line on the Floor Panel over the center of each Floor Joist using a pencil and a piece of lumber from the kit (or use a chalk line) to make nailing easier.

With Floor Panels flush to outside edges of Floor Frame, nail with 2" nails every 12" through Floor Panels into all Floor Bond Boards and Floor Joists.

Your Floor is now complete. Check to be sure it is properly positioned and leveled to ground before beginning assembly of your Wooden Storage Building.