


Foundation Kit



Instructions for Assembly Size 4' x 8'

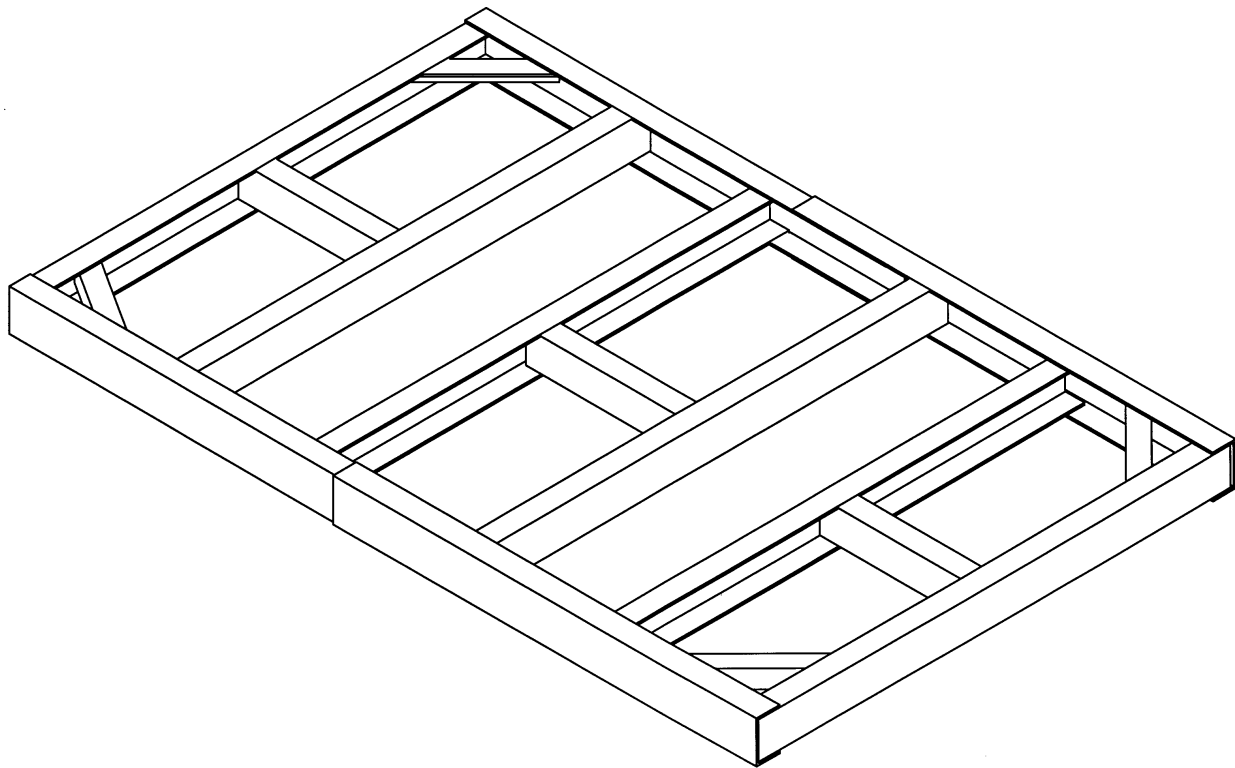

TOOLS YOU WILL NEED

- Cordless Drill - Philips Head


1. Assemble the channel (F04C) & (F05C) together using 4 screws. Make 2 sets.

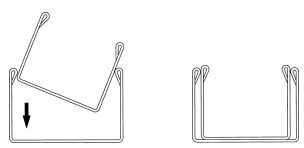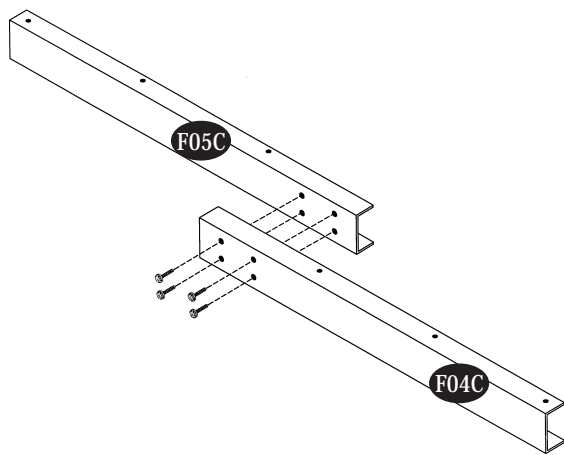

Parts List

Note: Check all parts prior to installation.

CODE	DESCRIPTION	QTY
F01C	FOUNDATION 'U' CHANNEL	6
F02C	FOUNDATION 'U' CHANNEL	3
F03	FOUNDATION 'L' ANGLE	4
F04C	FOUNDATION 'U' CHANNEL	2
F05C	FOUNDATION 'U' CHANNEL	2

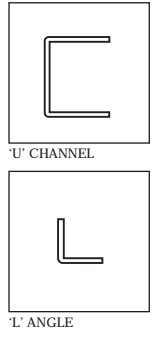


ACCESSORIES

CODE	DESCRIPTION	QTY
S1	DIA. 4.2 x 16mm. (5/32" x 5/8") SHEET METAL SCREW	52


2. Make a frame with the sub assemblies as shown below.

Note

Make sure while assembling, the channel position should be as shown.

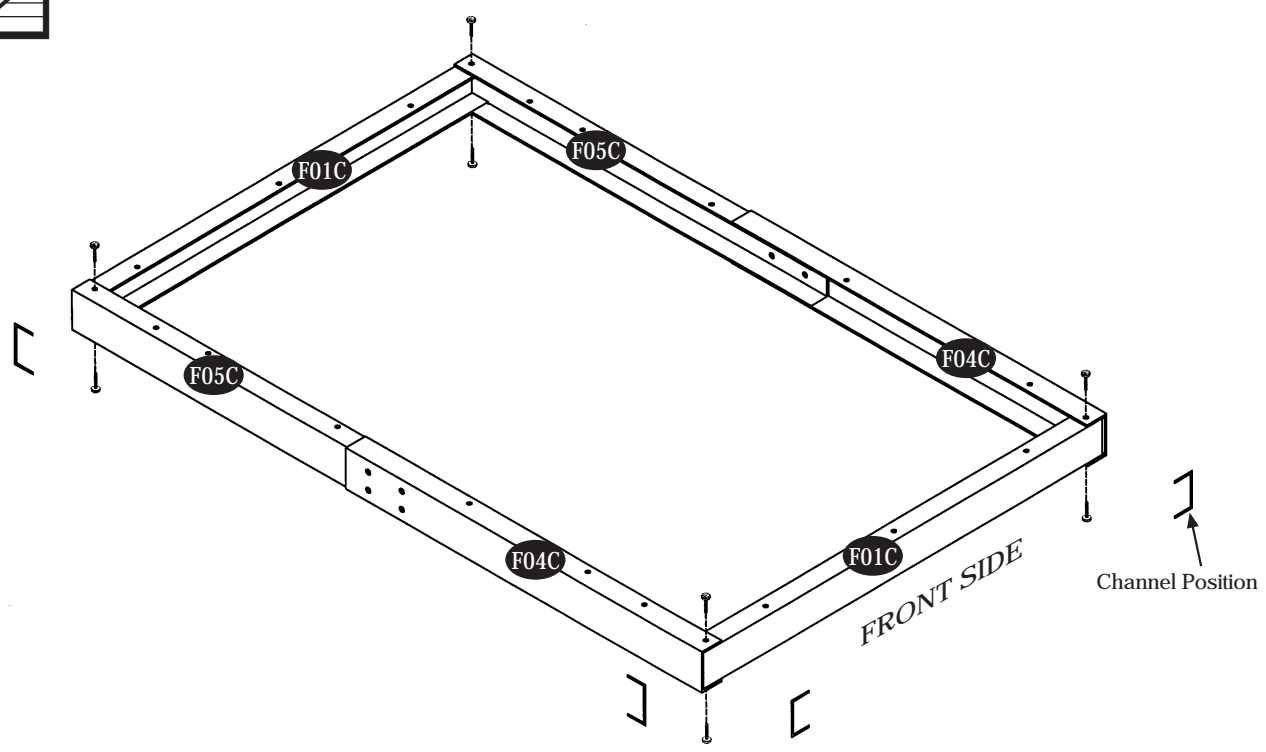


3. Fix the L-angle (F03) to the channel at all the four corners to make a perfect frame. See Fig.

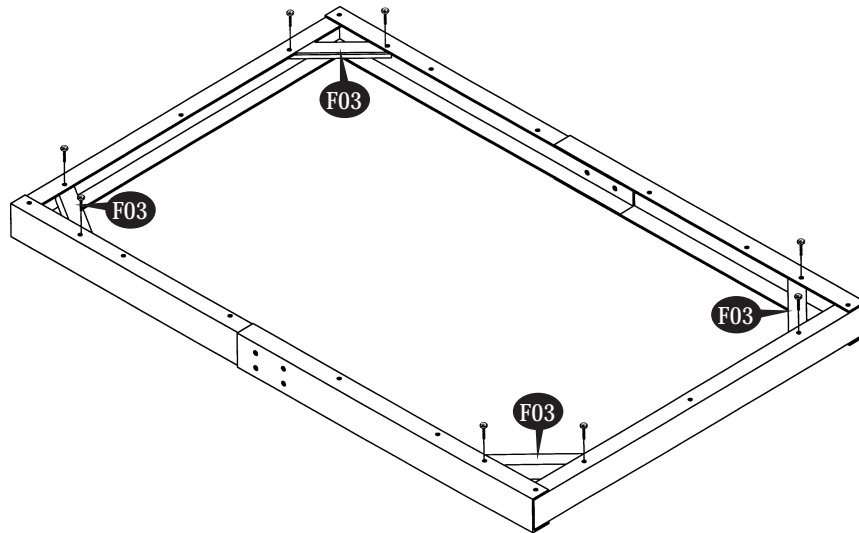


4. Fix the channel (F01C) into the main frame as shown. See Fig.


Note *Make sure while assembling, the channel position should be as shown.*

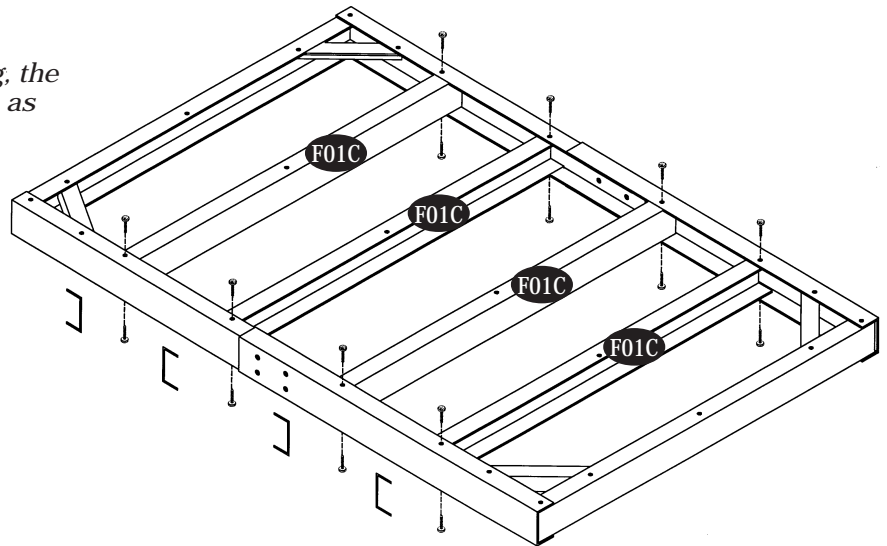

5. Fix the channel (F02C) into the frame with screws as shown. See Fig.

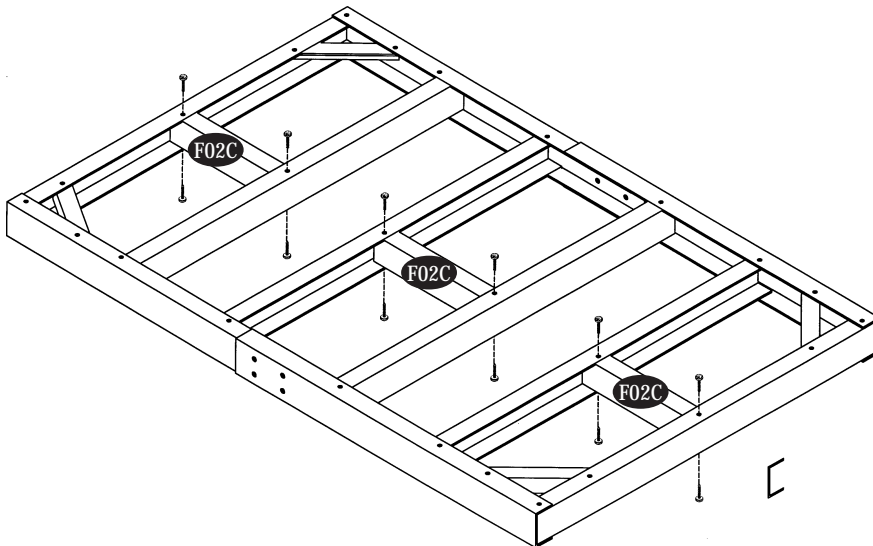

6. Assemble the U-Channel bases on top of the foundation as shown in Figure.

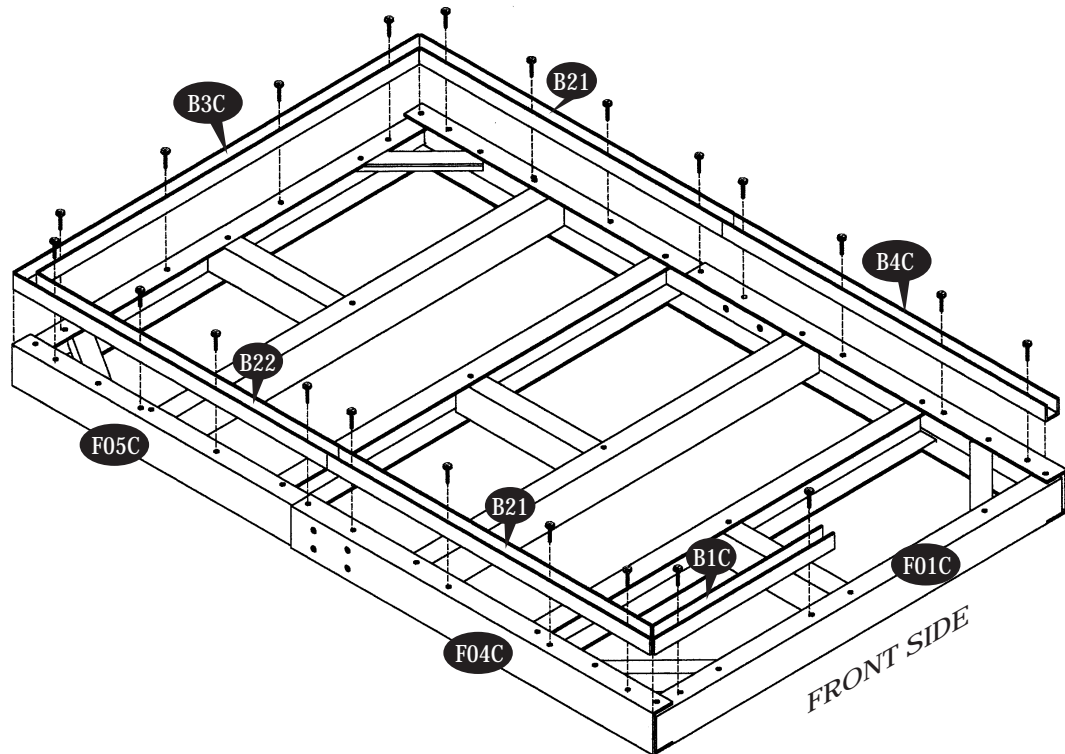

7a. After completing the assembly of shed place exterior grade CDX 3/4" (19mm) plywood inside the foundation. See fig.

OR 7b. After completing the assembly of the base U-channel fill the concrete upto the foundation top surface.

