

SAFE-USE™ Sanitary Napkin Receptacle

Note: This receptacle is designed for your *safe use*. The material is OSHA approved, can be easily washed or sanitized, and will not rust


Installation and Operating Instructions

Wall Mount:

Use screws provided or pressure sensitive mounting tape. Install approximately same height as toilet tissue dispenser and within easy reach of seated occupant. Place paper liner inside receptacle.

To Empty Receptacle:

Place trash container under receptacle. Grasp center-bottom of the receptacle and pull outwards. Contents will fall into trash container

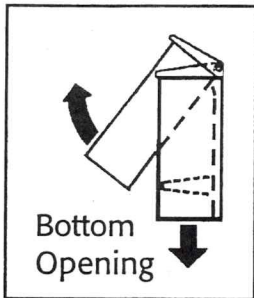

SAFE-USE™ Sanitary Napkin Receptacle

Note: This receptacle is designed for your *safe use*. The material is OSHA approved, can be easily washed or sanitized, and will not rust

Installation and Operating Instructions

Floor Mount:

Unit can be used on floor individually, or mounted back to back with pressure sensitive tape and placed between stalls. Apply tape to location shown. Tape will bond the bottom to the top and assure on spillage of contents from the bottom of the receptacle

To Empty Receptacle:

Remove contents from top

