#25032000/#25033000 *Impact NATURELLE® WALL MOUNT FEMININE NAPKIN RECEPTACLE

TO MOUNT

Install one unit beside each toilet in the women's restroom. Mount on wall within easy reach of seated occupant - at same height as toilet tissue dispenser.

Mark on wall location of two mounting screws. Start screws. Hang unit and tighten screws.

TO OPEN

Grasp bottom front edge of unit firmly and pull outward.

TO EMPTY

Place trash container below unit. Open unit. Paper liner and contents will fall into trash container. Close unit and insert fresh liner in top.

FOR REFILL LINERS SPECIFY #77






ENCLOSED IS A SELF ADHERING STICKER. PLEASE PLACE THIS STICKER ON THE TOP OR FRONT OF THE SANISAC UNIT.

SAMPLE STICKER ONLY

PLEASE PLACE TAMPON **APPLICATOR & USED** SANITARY PADS IN THIS CONTAINER

Impact Products LLC. 2840 Centennial Road Toledo, OH 43617

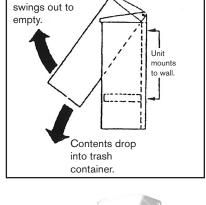

Front of unit



impact-products.com 419.841.2891 800.833.1541