ASSEMBLY INSTRUCTIONS FOR STACK RACK™




NOTE: Do not assemble STACK RACK[™] unless it is at room temperature of 65°F

The unassembled STACK RACK[™] carton consists of the following items:

for the 3 Shelf STACK RACK[™] - 3 plastic shelves and 8 plastic posts

- for the 4 Shelf STACK RACK[™] 4 plastic shelves and 12 plastic posts
- for the 5 Shelf STACK RACK[™] 5 plastic shelves and 16 plastic posts
- one packet of 4 plastic end caps to be placed on the end fittings of top shelf once STACK RACK[™] is fully assembled

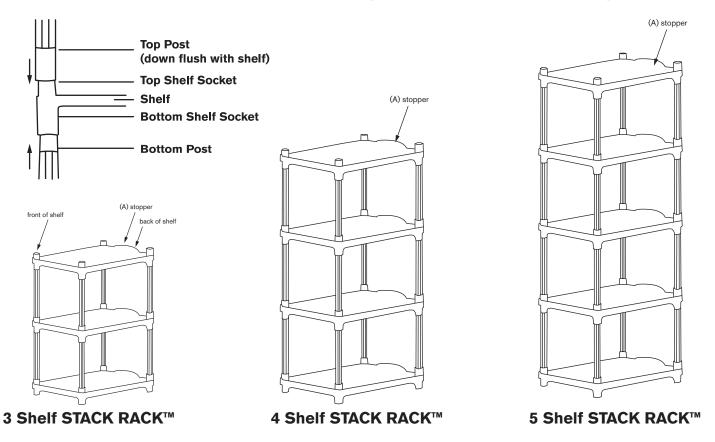

STACK RACK[™] should be assembled as follows:

- 1. Place on of the plastic shelves on a flat surface with the smooth side facing up. Insert one post over each one of the top shelf sockets of the shelf then push down with a slight twist until post is flush with shelf. Make sure each post is flush with shelf to assure proper balance.
- 2. Keeping the "Stopper" (A) aligned with the "Stopper" on the bottom shelf, place the next shelf smooth side up so the 4 vertical posts already assembled, slide into the bottom shelf sockets of the shelf. "Stoppers" should be aligned for proper inserting of all plastic containers.
- 3. Simply apply downward pressure to each corner of the shelf to secure tight fit of the shelf.
- 4. The above assembly procedure should be repeated for the next of the posts and shelves until the STACK RACK[™] is completely assembled.
- 5. After completing assembly, use package of plastic end caps and place 4 end fittings to top shelf.

NOTE: Replacement parts available. Please contact your local distributor