

# GRAFFITI WIPES

Product # 1447

## *Removes paint & graffiti in one easy step*

Used for fast, easy clean-up of paint from non-porous surfaces. These amazing wipes are premoistened with an incredible cleaning formula that removes paints (including enamel), ink and even permanent marker. A few swipes with a single wipe quickly dissolves away unwanted paint and graffiti. Does not contain amyl acetate or methylene chloride, unlike other graffiti removers, making these towels less hazardous for users as well as surfaces.

### Use them on various surfaces including:

- Bathroom partitions
- Phone booths
- Lamp posts
- Bus stops and seats
- Aluminum siding
- Road signs
- Stainless steel
- Billboards
- Desks
- Wall tile
- Trains
- Lockers

### Effective Against

- Paint
- Enamel
- Ink
- Permanent marker

### Features and Benefits

- Non-toxic when compared with other paint and graffiti removers
- Environmentally safe and biodegradable formula
- Abrasive yet non-scratching fabric aids in cleaning
- Towels stay moist for greater usage and longer shelf life

### Properties

Appearance .....	Purple cloth
Size of towel .....	9.5" x 12"
Fragrance .....	Mild odor
Specific gravity (liquid) .....	1.08
Flash point .....	<200 ° F
VOC Content (liquid) .....	15-20%

### Directions

Unfold towel and lightly scrub in a circular motion to begin dissolving paint and graffiti. Wipe any remaining residue with a clean cloth. Repeat if necessary.

NOTE: When using on a pre-painted surface, initially test in an inconspicuous area to make sure paint is not removed along with the graffiti. These wipes may attack certain plastics.

### Ingredients


	CAS Number
Dimethyl Glutarate .....	1119-40-0
n-Methyl Pyrrolidone .....	872-50-4
Dimethyl Succinate .....	106-65-0
Dimethyl Adipate .....	627-93-0
Linear Alcohol Ethoxylate .....	34398-01-1

### Safety

Caution: May be harmful if swallowed. May irritate eyes and skin. Keep out of the reach of children.

### DOT Shipping (ground transportation)

Proper Shipping Name:	None
Class:	None
ID Number:	None
Packing Group:	None

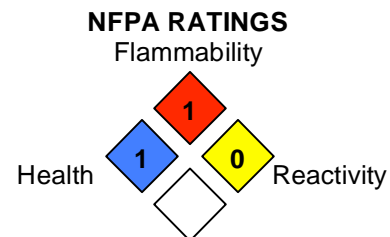

### Quantities

20 wipe canisters	6X1 case
40 wipe canisters	6X1 case



**Betty Mills**  
COMPANY

1447-110206

1-800-743-6417 • Fax 414-354-9219 • [www.BettyMills.com](http://www.BettyMills.com)  
The Betty Mills Co., L.L.C. • 2121 S. El Camino Real, Suite D-100, San Mateo, CA 94403