



F2110

Chlorinated Degreaser

PRODUCT DESCRIPTION:

Chlorinated Degreaser is a heavy-duty, high foaming concentrate, formulated with bleach and increased alkalinity to effectively remove grease, blood, fats, marrow and other protein based soils from meat, poultry, and seafood processing equipment, tables, butcher blocks, floors and walls.

FEATURES:

Deodorizing:

Bleach based formulation effectively removes offensive odors associated with meat, fish and poultry processing, leaving behind a "clean" fragrance.

Cost Effective:

Concentrated, high foaming formula provides fast, effective cleaning which reduces product usage.

Safe to Use:

Formulated to protect metal surfaces. Safe to use on stainless steel, aluminum, and galvanized surfaces.

Environmentally Safe:

Contains no VOC's, dyes, butyl, perfume, or other ingredients known to harm the environment.

PRODUCT SPECIFICATIONS:

pH (concentrate)	13.0 ± 0.5
Appearance	Clear Colorless Liquid
Fragrance	Chlorine
Freezing Point	About 32°F
Solubility in Water	Complete
Flash Point	None

INGREDIENTS:

Water	7732-18-5
Sodium hypochlorite	7681-52-9
Sodium metasilicate	6834-92-0
Sodium lauroyl sarcosinate	137-16-6
Sodium hydroxide	1310-73-2

ECOLOGICAL INFORMATION

- Biodegradable Surfactants
- Contains no Phosphorus
- Concentrated; eliminates waste and provides source reduction.

DILUTIONS	HEALTH	FLAMMABILITY	REACTIVITY
CONCENTRATE CONCENTRAR	NFPA 3 HMIS	NFPA 0 HMIS	NFPA 1 HMIS
(1:20 RATIO) (1:20 RAZÓN)	NFPA 1 HMIS	NFPA 0 HMIS	NFPA 0 HMIS
PROPORCIÓN	SALUD	INFLAMABILIDAD	REACTIVIDAD


0	1	2	3	4
Minimal	Slight	Moderate	Serious	Severe
Mínimo	Mínimo	Moderar	Grave	Drástico

Chlorinated Degreaser

DIRECTIONS

USE INFORMATION

Remove all food and food packaging items before using this product. Dismantle all appropriate equipment parts. Scrape or brush away all heavy soil deposits on machines, equipment, floors and walls. Dispose of debris.

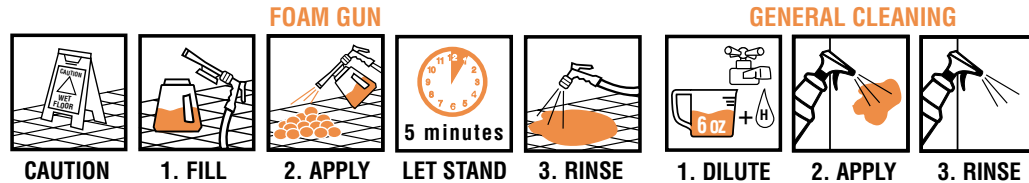

FOAM GUN

1. **FILL CHAMBER** on foam gun.
2. **APPLY** diluted product through foam gun. **LET STAND** for 5 minutes. Agitate with brush if required.
3. **RINSE** with clean, hot potable water.

GENERAL CLEANING

1. **DILUTE** at 6 ounces per gallon of hot water (1:20 ratio) for general cleaning.
2. **APPLY** the diluted product with a sprayer. Agitate with a brush as required. On ovens or hoods use a spray bottle and wipe immediately. Soak dirty pans in the sink and rinse.
3. **RINSE** with clean, hot potable water. Squeegee excess water into a drain or pick up with a wet/dry vacuum.

Note: If sanitation step is required, use a quality Franklin sanitizer after degreasing or cleaning with **Chlorinated Degreaser**.

FIRST AID:

If in eyes or on skin, immediately flush with plenty of water for at least 15 minutes while removing contaminated clothing and shoes. Get medical attention. **If inhaled**, remove to fresh air, get medical attention. **If swallowed**, get medical attention. NEVER GIVE ANYTHING BY MOUTH TO AN UNCONSCIOUS PERSON.

HANDLING AND STORAGE:

SUGGESTED STORAGE TEMPERATURE: Store inside at 40-90°F. **SPECIAL HANDLING AND STORAGE:** Handle in accordance with good industrial hygiene and safety practices. These practices include avoiding unnecessary exposure and removal of material from eyes, skin and clothing. Store in a cool and dry ventilated area. Protect from freezing. Thoroughly rinse empty containers. **KEEP OUT OF REACH OF CHILDREN.**

PERSONAL PROTECTION:

Respiratory Protection: Not needed under normal use of this product.

Ventilation: Use with adequate ventilation.

Eye Protection: Safety glasses are required.

Protective Gloves: Protective gloves are required.

Other Protective Clothing or Equipment: Wear clothing as necessary to prevent skin contact.



TRANSPORTATION INFORMATION:

ONE GALLON OR SMALLER:

Consumer Commodity, ORM-D

LARGER THAN ONE GALLON:

U.S. DOT - Proper Shipping Name: Corrosive Liquid, Basic, Inorganic, N.O.S. (Sodium Hypochlorite)

Hazard Class: 8

ID Number: UN 3266

Packing Group: III

Marine Pollutant: No

MSDS RETRIEVAL
Read MSDS before using this product
800-551-0101

www.franklintechnology.com

OBTENCIÓN DE HDSM
Leer la HDSM antes de utilizar este producto

**FOR CHEMICAL EMERGENCY,
SPILL, LEAK, FIRE, EXPOSURE OR ACCIDENT
CALL CHEMTREC DAY OR NIGHT
800-424-9300**

**PARA EMERGENCIAS QUÍMICA DERRAMES,
ESCAPES, FUEGO, EXPOSICIÓN O ACCIDENTE
LLAMAR DE DÍA O DE NOCHE A CHEMTREC**

**TECH HOTLINE
800-810-4829
LINEA DE TÉCNICA**