

Clearinse®

FOAMING CLEANER/DEGREASER

TM

DATA TECH SHEET

PRODUCT DESCRIPTION:

Clearinse® is a concentrated foaming cleaner/degreaser for use in meat processing areas, fish processing areas, delicatessens, restaurant cooking areas and bakeries. Use **Clearinse®** to remove grease, blood, fats, marrow and protein soils from meat and poultry processing equipment, tables, cutting boards, floors and walls.

FEATURES:

Labor Saving:

Save time, effort and labor dollars by speeding up the daily cleaning operation. Quickly cuts through heavy fat, blood and protein to remove them with little to no agitation. Rinses easily.

Cost Effective:

Concentrated, high foaming formula provides fast, effective cleaning which reduces product usage.

USDA Authorized:

USDA Rated A1. Authorized by USDA for use in federally inspected meat and poultry plants.

PRODUCT SPECIFICATIONS:

pH (concentrate)	12.85 ± 0.25
Appearance	Light Yellow Liquid
Fragrance	Solvent
Freezing Point	About 32°F
Solubility in Water	Complete
Flash Point	None

INGREDIENTS:

Water	7732-18-5
Sodium dodecylbenzene sulfonate ..	25155-30-0
2-Butoxyethanol	111-76-2
Sodium metasilicate	6834-92-0
Nonyl phenoxy poly (ethyleneoxy) ethanol	9016-45-9

ECOLOGICAL INFORMATION

- Biodegradable Surfactants
- Contains no Phosphorus
- Concentrated; eliminates waste and provides source reduction.

DILUTIONS	HEALTH	FLAMMABILITY	REACTIVITY
CONCENTRATE CONCENTRAR	NFPA 3 HMIS	NFPA 0 HMIS	NFPA 0 HMIS
(1:10 RATIO) (1:10 RAZÓN)	NFPA 2 HMIS	NFPA 0 HMIS	NFPA 0 HMIS
(1:80 RATIO) (1:80 RAZÓN)	NFPA 0 HMIS	NFPA 0 HMIS	NFPA 0 HMIS
PROPORCIÓN	SALUD	INFLAMABILIDAD	REACTIVIDAD

0	1	2	3	4
Minimal	Slight	Moderate	Serious	Severe
Mínimo	Mínimo	Moderar	Grave	Drástico


Clearinse® FOAMING CLEANER/DEGREASER

DIRECTIONS

USE INFORMATION

Remove all food and food packaging items before using this product. Dismantle all appropriate equipment parts. Scrape or brush away all heavy soil deposits on machines, equipment, floors and walls. Dispose of debris.

FOAM GUN

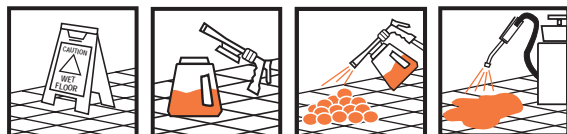

CAUTION

1. FILL

2. APPLY

3. RINSE

GENERAL CLEANING



1. DILUTE

2. APPLY

3. RINSE

FOAM GUN

1. **FILL CHAMBER** on foam gun.
2. **APPLY** the diluted product through foam gun. Agitate with brush as required.
3. **RINSE** with clean, hot potable water.

GENERAL CLEANING

1. **DILUTE** at 1.5 ounces per gallon of hot water (1:80 ratio) for general cleaning. Dilute at 13 ounces per gallon of hot water (1:10 ratio) for heavy duty cleaning.
2. **APPLY** the diluted product with a sprayer. Agitate with a brush as required. On ovens or hoods use a spray bottle and wipe immediately. Soak dirty pans in the sink and rinse.
3. **RINSE** with clean, hot potable water. Squeegee excess water into a drain or pick up with a wet/dry vacuum.

Note: If sanitation step is required, use a quality Franklin sanitizer after degreasing or cleaning with Clearinse®.

FIRST AID:

If in eyes or on skin, immediately flush with plenty of water for at least 15 minutes while removing contaminated clothing and shoes. Get medical attention. **If inhaled**, remove to fresh air, get medical attention. **If swallowed**, get medical attention. NEVER GIVE ANYTHING BY MOUTH TO AN UNCONSCIOUS PERSON.

HANDLING AND STORAGE:

SUGGESTED STORAGE TEMPERATURE: Store inside at 40-90°F. **SPECIAL HANDLING AND STORAGE:** Handle in accordance with good industrial hygiene and safety practices. These practices include avoiding unnecessary exposure and removal of material from eyes, skin and clothing. Store in a cool, dry, ventilated area. Protect from freezing. Thoroughly rinse empty containers. **KEEP OUT OF REACH OF CHILDREN.**

PERSONAL PROTECTION:

Respiratory Protection: Not needed under normal conditions.

Ventilation: Use with adequate ventilation.

Eye Protection: Safety glasses are required.

Protective Gloves: Protective gloves are required.

Other Protective Clothing or Equipment: Wear clothing as necessary to prevent skin contact.



TRANSPORTATION INFORMATION:

U.S. DOT - Proper Shipping Name: Not regulated by DOT.

Marine Pollutant: No

MSDS FAX RETRIEVAL
Read MSDS before using this product

800-551-0101

OBTENCIÓN DE HDSM POR FAX
Leer la HDSM antes de utilizar este producto

FOR CHEMICAL EMERGENCY,
SPILL, LEAK, FIRE, EXPOSURE OR ACCIDENT
CALL CHEMTREC DAY OR NIGHT

800-424-9300

PARA EMERGENCIAS QUÍMICA DERRAMES,
ESCAPES, FUEGO, EXPOSICIÓN O ACCIDENTE
LLAMAR DE DÍA O DE NOCHE A CHEMTREC

TECH HOTLINE
800-810-4829
LINEA DE TÉCNICA