



Neutral Cleaner 512

Product Description:

Specially designed to safely clean finished floors. Leaves no dulling residue to haze or harm the finish gloss. Autoscrubber application requires no additional mopping and produces very little foam in recovery tanks. Packaged for use exclusively in the innovative, SHURFIL™ Chemical Management System.

Features:

Environmentally Friendly:

Neutral Cleaner 512 is a super concentrated product that contains no harsh alkalis. It is formulated with biodegradable surfactants and has a low VOC content.

Cost Effective:

Ultra concentrated, one 64 ounce bottle makes 256 gallons of mopping and scrubbing solution. Neutral Cleaner 512 reduces storage space and eliminates waste.

Product Specifications:

pH.....	8.0 ± 0.5
Appearance.....	Red, Liquid
Fragrance.....	Citrus
Freezing Point.....	About 32°F
Solubility in Water.....	Complete
Flash Point.....	None


Ingredients:

Water.....	7732-18-5
Nonyl phenoxy poly (ethyleneoxy) ethanol.....	9016-45-9
Triethanolamine.....	102-71-6
Sodium EDTA.....	60-00-4

Ecological Information:

- Biodegradable Surfactants
- Neutral pH
- Contains no Phosphorus
- Low VOC

End-Use Rating

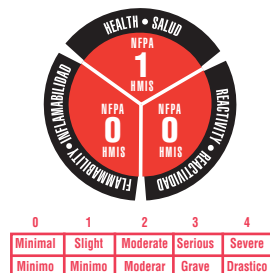




NEUTRAL CLEANER 512



Use Information:

The SHURFIL™ bottle is preset to deliver a 1:512 ratio of Neutral Cleaner 512 solution to any appropriate end use container. Use the diluted product as directed according to the concentrate label.

LOADING INSTRUCTIONS



SHURFIL™ LOADING INSTRUCTIONS:


1. **REMOVE CAP**
2. **POSITION BOTTLE** with spout on right.
3. **INSERT BOTTLE** into dispenser until firmly seated.

SHURFIL™ UNLOADING INSTRUCTIONS:

1. **GRASP** bottle by bottom.
2. **MOVE** release lever to right and pull bottle from unit.
3. **REPLACE CAP** and store bottle.

DILUTIONS DILUCIÓN	
HIGH	512
LOW	512

UNLOADING INSTRUCTIONS



DIRECTIONS FOR USE:

For use in automatic scrubbers, damp mop application or spray bottle. The SHURFIL™ bottle is set to deliver a ratio of (1:512) solution. For automatic scrubbers, scrub with a red pad. Apply solution, scrub and pick up in one operation. Rinsing not required. Pick up any trails left from the scrubber using a clean mop.

First Aid:

If in eyes or on skin, immediately flush with plenty of water for 15 minutes. Get medical attention.

If swallowed, get medical attention. **If inhaled,** remove to fresh air. Get medical attention. NEVER GIVE ANYTHING BY MOUTH TO AN UNCONSCIOUS PERSON.

Handling and Storage:

SUGGESTED STORAGE TEMPERATURE: Store inside at 40-90°F. **SPECIAL HANDLING AND STORAGE:** Handle in accordance with good industrial hygiene and safety practices. These practices include avoiding unnecessary exposure and removal of material from eyes, skin and clothing. Store in a cool, dry, ventilated area. **Protect from freezing.** Thoroughly rinse empty containers.

KEEP OUT OF REACH OF CHILDREN

Personal Protection:

Respiratory Protection: Not needed under normal conditions.

Ventilation: Use with adequate ventilation.

Eye Protection: Safety glasses are recommended.

Protective Gloves: Protective gloves are optional.

Other Protective Clothing or Equipment: Wear clothing as necessary to prevent skin contact.

Transportation Information:

U.S. DOT - Proper Shipping Name: Not-Restricted

Marine Pollutant: No