

检验检测报告

广州质量监督检测研究院

说 明

1. 广州质量监督检测研究院（下称“本院”）及设立的国家产品质量监督检验中心（下称“中心”）和省级授权产品质量监督检验机构（下称“省站”）保证检验检测的科学性、公正性和准确性，对检验检测的结果负责，并对委托单位所提供的样品和技术资料保密。
2. 报告无主检、审核和批准人员签字，或涂改，或未盖本院（中心、省站）“检验检测专用章”，或无骑缝章无效。未经本院（中心、省站）许可，不得部分复印、摘用或篡改本报告的内容。
3. 送样委托检验检测结果仅对来样有效；未经本院（中心、省站）同意，样品委托人不得擅自使用检验检测结果进行不当宣传。
4. 送样委托检验检测的样品及相关信息均由委托方提供，本院（中心、省站）不对其真实性及完整性负责。
5. 对检验检测报告若有异议，应于报告收到之日起十五日内向本院（中心、省站）提出，逾期不予受理。

业务联系方式

食品业务部	020-83390395	83655806	83187077
化工业务部	020-83186957	83193967	83392709 31002536
轻工包装业务部	020-83354114	83398676	83183524 82022363
建材消防业务部	020-83334528	82022335	83355302 82020817
轻工机电业务部	020-82022358	83398701	
投诉处理：	020-83179105（质保审查部）		
样品退样：	020-83186557（样品仓库）		

联系地址：广州市番禺区石楼潮田工业区珠江路 1-2 号（总部），邮编：511447
广州市越秀区八旗二马路 38 号（分部），邮编：510110

报告进度和真伪查询

网站查询，网址 www.qmark.com.cn



产品名称 Sample Name 商标 Trademark 型号/规格/等级 Type/Specification/Grade	一次性防护口罩（非医用） Disposable Mask (Non-medical) 康利和 Kanglihe KN95 ----	生产日期 Production Date 编号或批号 Lot No. 限期使用日期 Expiration Date	2020-04-21 ---- ---- ---- ----
受检单位 Inspected Entity	----	抽送样单号 Contract No.	LC2004100YQ-1
委托单位 Applicant	广东尚驿织造实业有限公司 Guangdong Shangyi Weaving Industry co., LTD	测试类别 Contract Category	委托检验 Applicant Test
生产单位 Manufacturer	广东尚驿织造实业有限公司 Guangdong Shangyi Weaving Industry co., LTD	样品数量 Sample Quantity	50个 50Pcs
抽样地点 Sampling Place	----	抽(送)样日期 Sampling Date	2020-04-24
来样方式 (抽送样者) Sampling Way (Sampler)	委托单位送样 Submit by applicant	抽样基数 Sample Base	---- ----
样品状况 Condition of Sample	正常 Normal	检讫日期 Completion Date	2020-04-30
测试环境说明 Test Environment	按标准要求 As the requirements of test reference.		
测试依据 Test Reference	GB 2626-2006《呼吸防护用品 自吸过滤式防颗粒物呼吸器》 GB 2626-2006 Respiratory protective equipment - Non-powered air-purifying particle respirator		
测试结论 Test Conclusion	所检项目符合GB 2626-2006标准 (KN95) 要求。 The test items meet the requirements of GB 2626-2006 (KN 95) .  签发日期: 2020-04-30 此处未盖“检验检测专用章”本报告无效。 Report is invalid if not sealed.		
备注 Remarks			

批准:
Approved by

程小焯

审核:
Verified by

李石欣

主检:
Tested by

吴健兴



(5133/2020.04.30)

地址: 广州市番禺区石楼潮田工业区珠江路1-2号

防伪查询码: 95B37DABEA405E8A

Address: No.1 Zhujiang Road, Chaotian Industrial Area, Shilou, Panyu District, Guangzhou, Guangdong,

Anticounterfeiting Code: 95B37DABEA405E8A

序号 No.	检验项目 Test Items	单位 Unit	标 准 要 求 Reference Requirement	检 验 结 果 Test Results	单项评价 Assess
			----	----	
1	过滤效率 Filter efficiency	%	用氯化钠颗粒物检测 KN95: ≥ 95.0 Testing by sodium chloride particles KN95: ≥ 95.0	未处理样品 1#: 97.0 2#: 96.8 3#: 95.7 4#: 97.1 5#: 96.6 6#: 96.2 7#: 97.0 8#: 96.9 9#: 97.2 10#: 97.1 温湿度预处理后样品 11#: 95.4 12#: 97.1 13#: 95.4 14#: 95.7 15#: 95.9 Samples as received 1#: 97.0 2#: 96.8 3#: 95.7 4#: 97.1 5#: 96.6 6#: 96.2 7#: 97.0 8#: 96.9 9#: 97.2 10#: 97.1 Samples after temperature and humidity conditioning 11#: 95.4 12#: 97.1 13#: 95.4 14#: 95.7 15#: 95.9	合格 Pass
2	呼吸阻力 Breathing resistance	Pa	每个样品的总吸气阻力应不大于350Pa, 总呼气阻力应不大于250Pa The total inhalation resistance of each sample should not be more than 350 Pa, and the total exhalation resistance should not be more than 250 Pa.	总吸气阻力: 未处理样品 1#: 113 2#: 105 温湿度预处理后样品 3#: 88 4#: 94 总呼气阻力: 未处理样品 1#: 106 2#: 107 温湿度预处理后样品 3#: 91 4#: 106 The total inhalation resistance: Samples as received 1#: 113 2#: 105 Samples after temperature and humidity conditioning 3#: 88 4#: 94 The total exhalation resistance: Samples as received 1#: 106 2#: 107 Samples after temperature and humidity conditioning 3#: 91 4#: 106	合格 Pass

批准:
Approved by

程小炼

审核:
Verified by

李石欣

主检:
Tested by

吴健兴



(5133/2020.04.30)

序号 No.	检验项目 Test Items	单位 Unit	标 准 要 求 Reference Requirement	检 验 结 果 Test Results	单项评价 Assess
			----	----	
3	头带 Head harness	---	随弃式面罩的每条头带、带扣及其他调节部件在承受10N，持续10s的拉力时，不应出现滑脱或断裂 The head harness, buckle and adjustment parts of each disposable facepiece should not be slipped or broken after bearing the axial pressure of 10N for 10 seconds.	未处理样品 1#: 符合标准要求 温湿度预处理后样品 2#: 符合标准要求 Samples as received 1#: Meet the requirements Samples after temperature and humidity conditioning 2#: Meet the requirements	合格 Pass
4	可燃性 Flammability	---	暴露于火焰的各部件在从火焰移开后，不应燃烧；如果燃烧，续燃时间不应超过5s The components exposed to the flame shall not burn after being removed from the flame; if they are burnt, the continued burning time should not exceed 5 seconds.	未处理样品 1#: 符合标准要求 2#: 符合标准要求 温湿度预处理后样品 3#: 符合标准要求 4#: 符合标准要求 Samples as received 1#: Meet the requirements 2#: Meet the requirements Samples after temperature and humidity conditioning 3#: Meet the requirements 4#: Meet the requirements	合格 Pass

批准:
Approved by

程小炼

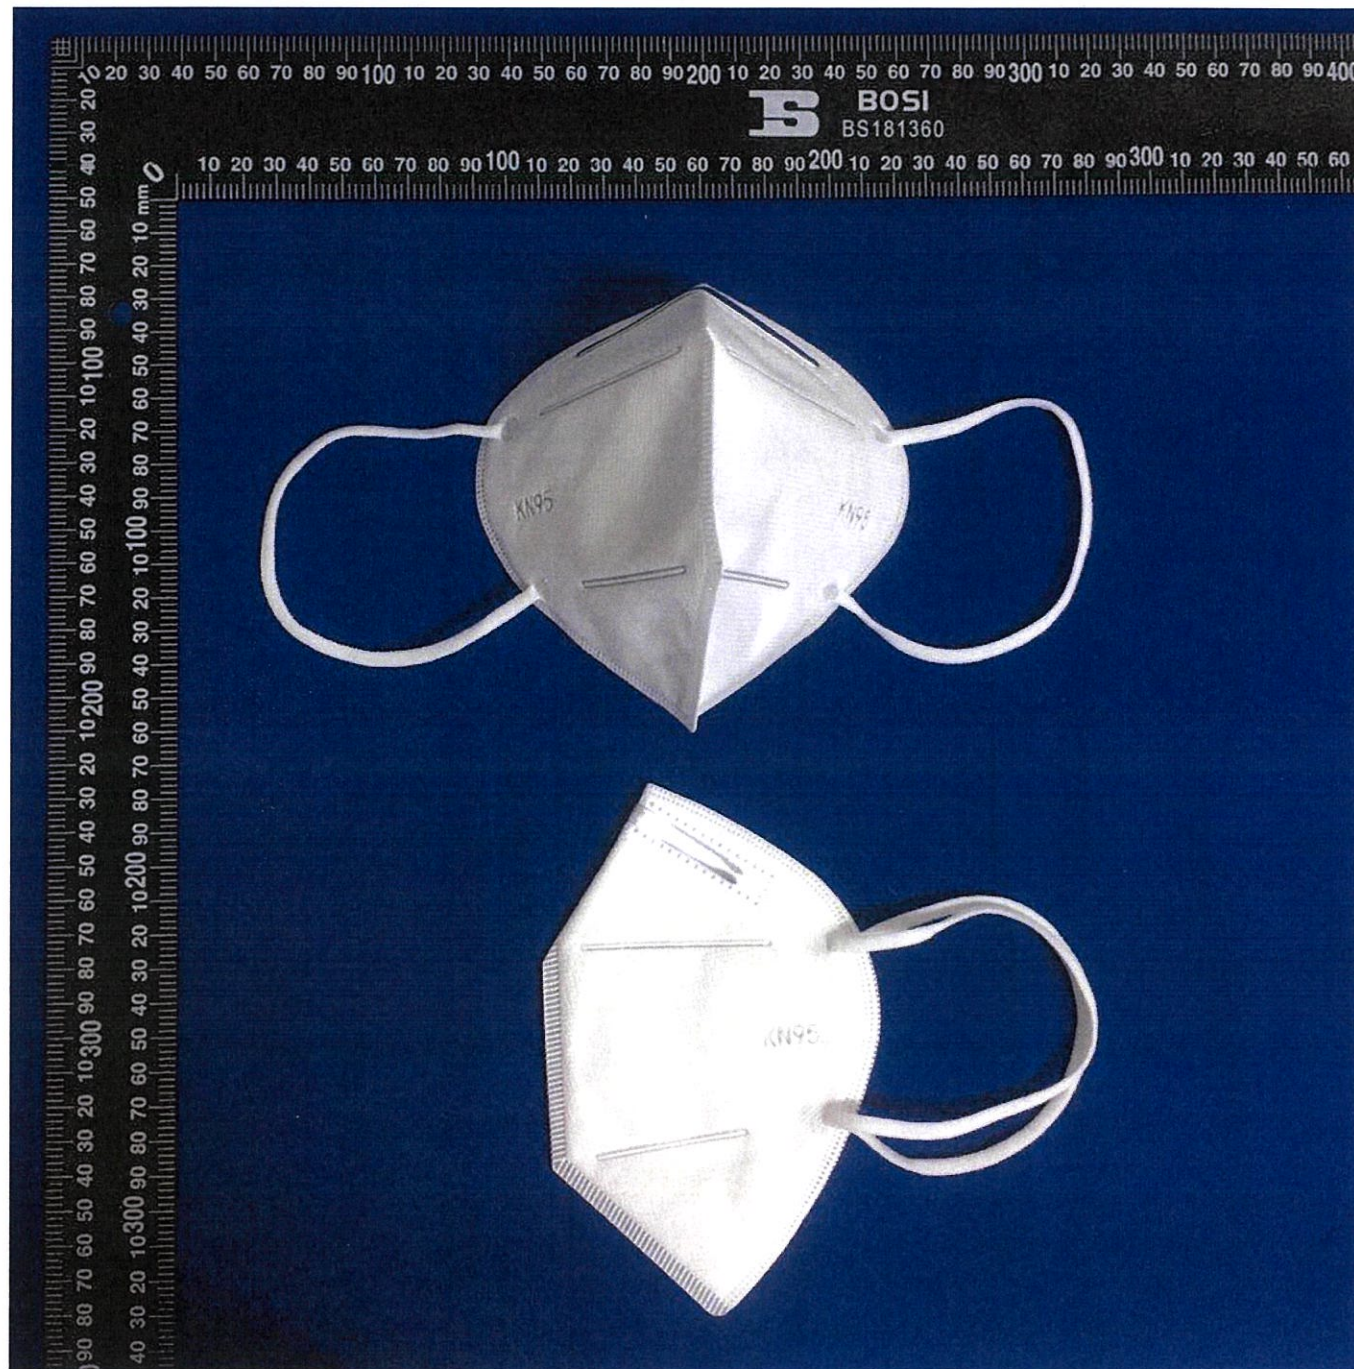
审核:
Verified by

李石欣

主检:
Tested by

吴健兴


(5133/2020.04.30)

批准: 程小炼
Approved by审核: 李石欣
Verified by主检: 吴兴
Tested by

(5133/2020.04.30)