



## **PURO Frame & Clips**

*ASHRAE front loading frames & accessories*

### **Introduction**

The Purolator PURO Frame ASHRAE holding frame is a 3", 16-gauge galvanized steel ASHRAE holding frame that can be used to hold filters individually, or be used in multiple banks. All filters are held in place with individual clips to accommodate a wide variety of filters measuring 1" – 12".

Each PURO Frame is manufactured with several features of construction which support use in a variety of HVAC applications and ensure it will outperform the competition.

### **Construction Features**

- Available in 16-gauge galvanized steel or type 304 stainless steel.
- Mechanically controlled production guarantees sheared deburred preformed edges, mounting alignment dimples, and flush mitered/welded corners.

### **Suggested Specifications**

- 1.) Holding frames shall be the PURO Frame ASHRAE holding frame type.
- 2.) These shall be constructed of 16-gauge galvanized or Type 304 stainless steel.
- 3.) All corners shall be mitered, continuously welded and ground to form a smooth surface between the frame sealing surface and gasket at the corner points of the sealing flange.
- 4.) All sheared edges of the frame shall be deburred prior to final assembly.
- 5.) The holding frames shall have pre-punched mounting holds to assure proper alignment and assembly

### **Size Availability (H" X W")**


24" x 24"

20" x 20"

24" x 12"



**PURO Frame ASHRAE Holding Frame**

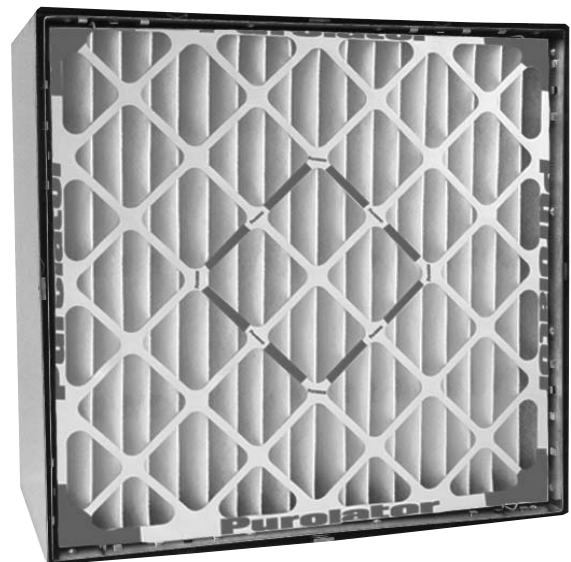

**PURO Frame ASHRAE Holding Frame with Filter**


NOTE: PURO Clips information is on the reverse

# PURO-Clips

A set of four **HFFC-AC02** or **HFFC-AC04** may be used to attach a prefilter to the face of a rigid box filter by using an **HFFFC-2312** or **HFFC-AC12** clip arrangement




**HFFC-AC12**

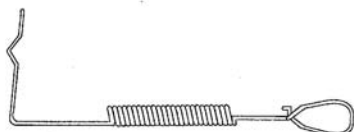

**HFFFC-2312**




The **HFFC-23** clip style and a PURO seal frame can accommodate a 2" filter or a combination of filters with a maximum thickness of 2".

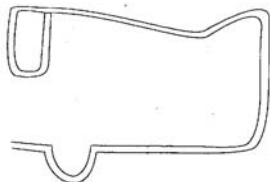

**HFFC-2305:** For use in fastening a variety of 3" or 4" filter configurations such as a 4" pleated filter.




**HFFC-AC02 or HFFC-AC04**

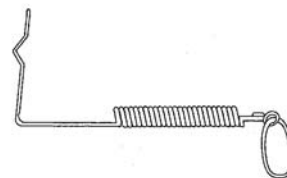


**HFFC-2306**

Spring clip for 6" rigid box filter

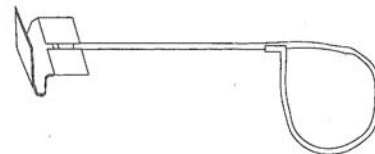

Our **HFFC-001** through **HFFC-0006 P-type clip** is effective in securing 1" through 6" depth filter combinations.

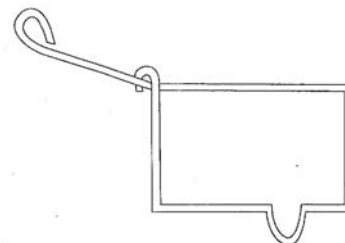

**HFFC-2304**

Clip for a bag filter in combination with a 2" pre-filter (upstream or downstream access).

**P-PUROCLIPFRAME-1208**



[www.purolatorair.com](http://www.purolatorair.com)



**CLARCOR Air Filtration Products**  
 100 River Ridge Circle • Jeffersonville, IN 47130  
 Customer Service Team: 1-866-925-2247 • Fax: 1-800-784-3458  
 Email: [info@purolatorair.com](mailto:info@purolatorair.com) • [www.purolatorair.com](http://www.purolatorair.com)

Distributed by:

© 2008 CLARCOR Air Filtration Products.  
 CLARCOR Air Filtration Products has a policy of continuous product research and development and reserves the right to change design and specifications without notice.  
 Terms and Conditions of Sale can be accessed in the "LOGIN" section at [www.purolatorair.com](http://www.purolatorair.com)