




Product Guide Metered Dispensers

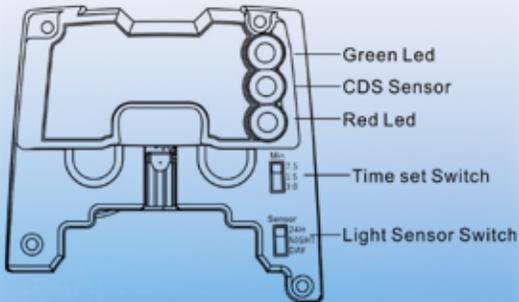

At the heart of our metered aerosols is the automatic, wall-mounted dispenser. This easy-to-use, versatile dispenser runs on two "C" size batteries (alkaline recommended), and provides reliable, consistent sprays.

CL7-MADISP-C - uses 2 'C' batteries

CL7-MICROCC - for use with Micro Metered Air Fresheners - uses 2 'C' batteries

CL7-MADISP9000 - for use on the 9000 shot meter - uses 2 'C' batteries

Features: (diagrammed for CL7-MADISP-C)

TIME SET SWITCH

Located inside the dispenser housing, this switch allows the user to adjust the frequency of sprays by intervals of 7.5, 15 or 30 minutes.

LIGHT SENSOR SWITCH

Also located inside, this switch dictates whether the dispenser is set up for 24-hour operation, or night or day only modes.

CDS SENSOR

Light source identifier, enables night or day operation modes.

GREEN LED

Flashing green indicates normal operation status

RED LED

Alerts user the refill may be empty, requiring replacement



CL7-MADISP-C



C-SIZE

